




Homelink Built-in Transmitter

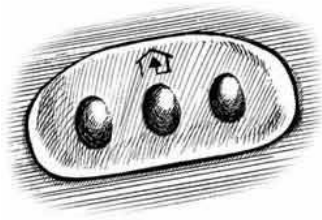

GEN 1 RED LED
GEN 2 AMBER LED

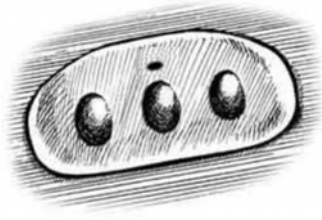

GEN 3 SINGLE OVAL
WORKS ON 315/390

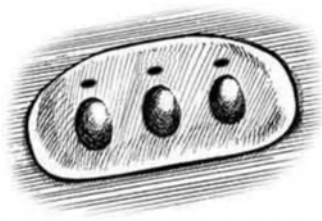

GEN 4 TRIPLE OVAL
WORKS ON 315/390

CODING INSTRUCTIONS FOR 1998 and LATER CARS

CLEAR THE UNIT

Press and hold the two outside buttons on the headliner until the small icon light does something different (sometimes this takes 20 to 30 seconds). Release the buttons.

PROGRAM

Hold the existing transmitter within 4 inches of the headliner and press and hold the transmitter button, while you are doing this press and hold the appropriate button on the headliner. Hold both of these buttons until the small icon light does something different.

Press and release the Learn Code button on the back of your door opener, it can often be found within about an inch of where the antennae wire disappears into the motor head.

Go back to the car and press the appropriate button on the headliner slowly 4 times.

TO PROGRAM ADDITIONAL DOORS

Do not CLEAR THE UNIT. Repeat the PROGRAM instruction using a different button on the headliner

TO PROGRAM NON-ROLLING CODE TRANSMITTERS

CLEAR THE UNIT as above.

PROGRAM the unit by holding the transmitter within 4 inches of the headliner and press and hold the transmitter button, while you are doing this press and hold the appropriate button on the headliner. Hold both of these buttons until the small icon light does something different. You are done, try the appropriate button on the headliner.